

YMMS: 2006 Chevrolet Cab & Chassis Silverado 3500

Engine: 6.6L Eng

VIN:

Jun 10, 2020

License: Odometer:


OFF-VEHICLE REPAIR INSTRUCTIONS (PART 1) > FUEL INJECTORS REMOVAL

Tools Required

J-46594 Fuel Injector Remover. See Special Tools .

1. Remove the left fuel injector bracket bolts.


Fig 1: View Of Left Fuel Injector Bracket Bolts

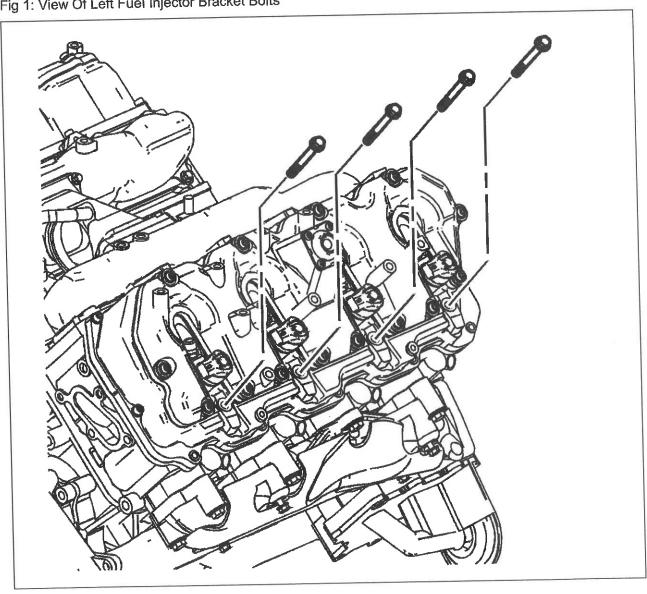

Courtesy of GENERAL MOTORS CORP.


2. Remove the right fuel injector bracket bolts.

Fig 2: View Of Right Fuel Injector Bracket Bolts

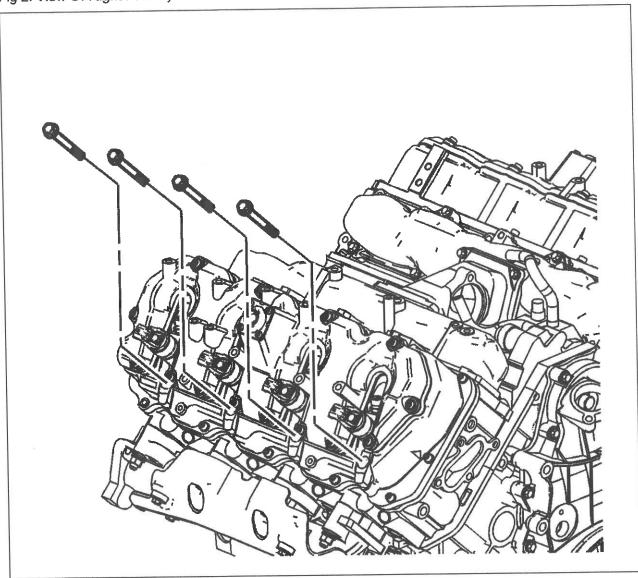

- 3. Install the J-46594 into the fuel injector brackets. See Special Tools .
- 4. Pull back on **J-46594** in one steady motion, until the fuel injector breaks free from its seat. See Special Tools .
- 5. Remove the J-46594 . See Special Tools .
- 6. Remove the left fuel injectors with brackets.

Fig 3: View Of Left Fuel Injectors W/Brackets

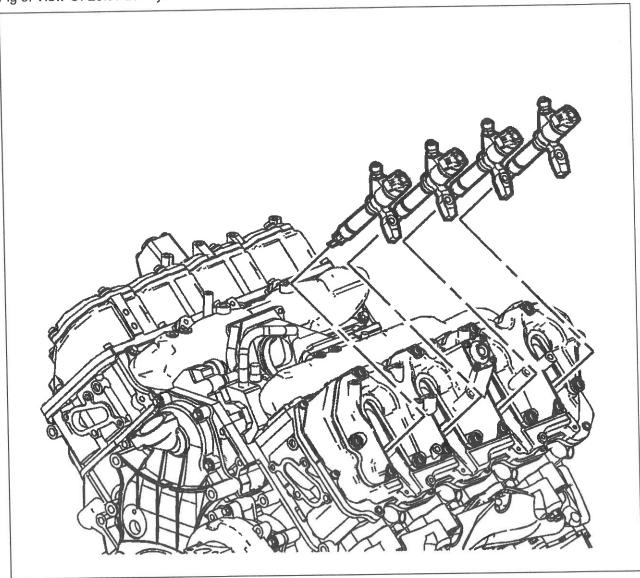

7. Remove the right fuel injectors with brackets.

Fig 4: View Of Right Fuel Injectors W/Brackets



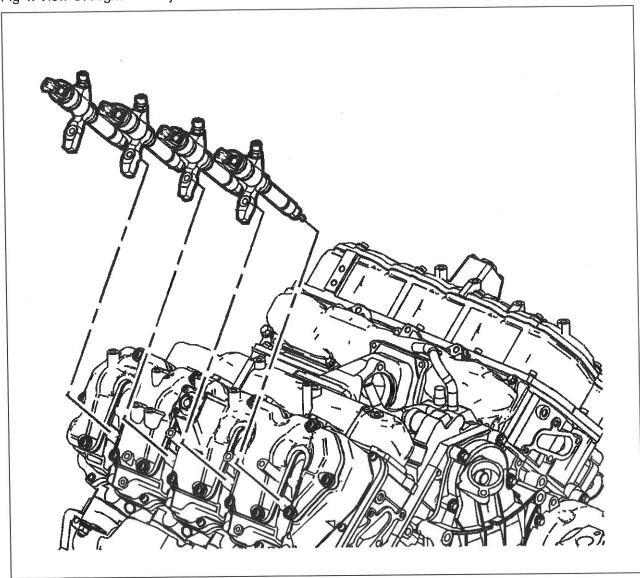


Fig 5: View Of Left Injector Bracket Pins

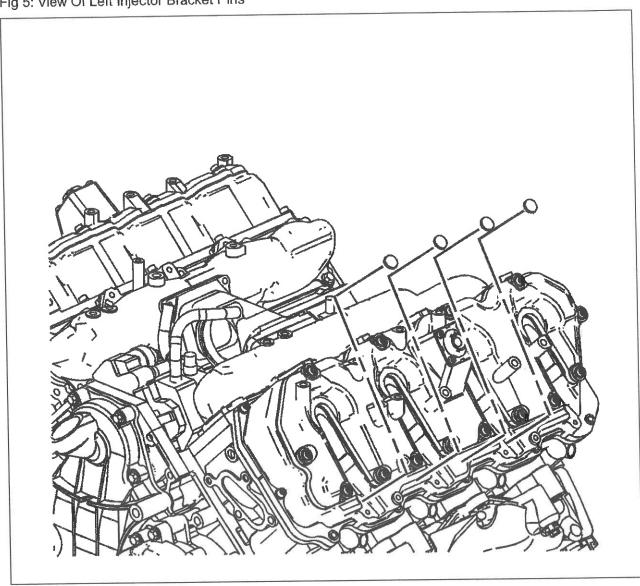

- 8. Remove the left injector bracket pins.
- 9. Remove the right injector bracket pins.
- 10. Remove the copper washer from the injector bore and discard.

Fig 6: Identifying Fuel Injector Copper Washers

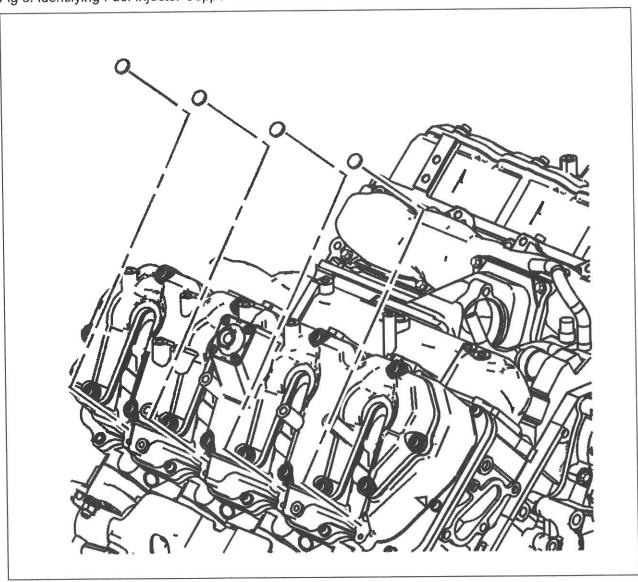

11. Remove the O-ring from the injector and discard.



YMMS: 2006 Chevrolet Cab & Chassis Silverado 3500

Engine: 6.6L Eng VIN:

Jun 10, 2020

License:

Odometer:

OFF-VEHICLE REPAIR INSTRUCTIONST (PART 3) > FUEL INJECTORS INSTALLATION

1. Install a new O-ring onto the fuel injector.

2. Lubricate the O-ring with engine oil.

3. Install a new copper washer into the fuel injector bore in the cylinder head.

Fig 1: Identifying Fuel Injector Copper Washers



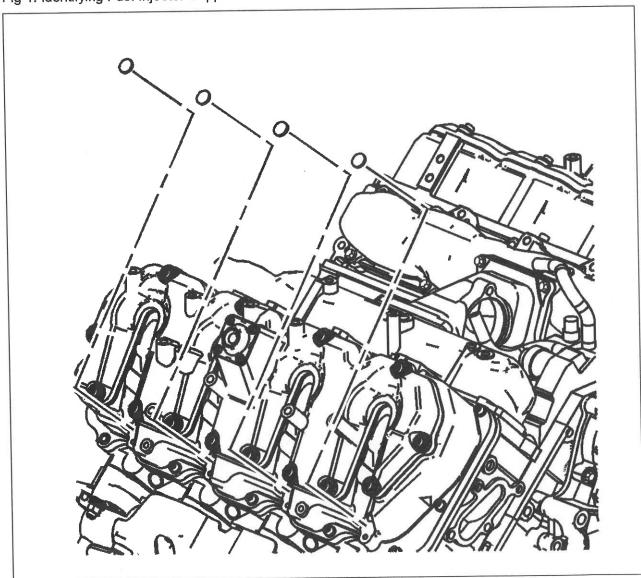


Fig 2: Identifying Copper Washers (Left Side)

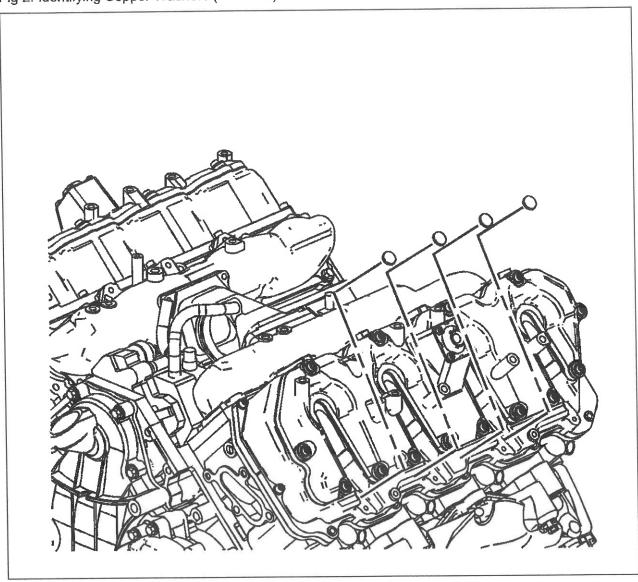


- 4. Install the fuel injector right bracket pin.
- 5. Install the fuel injector left bracket pin.
- 6. Install the right fuel injector with fuel injector bracket.

Fig 3: View Of Right Fuel Injectors W/Brackets

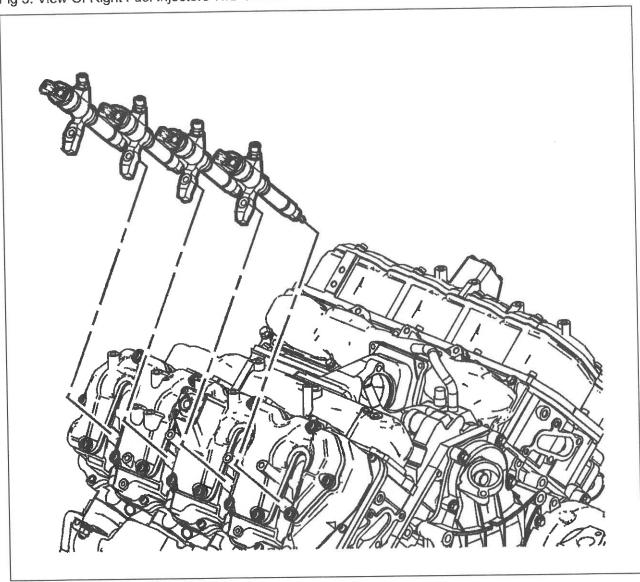


7. Install the left fuel injector with fuel injector bracket.

Fig 4: View Of Left Fuel Injectors W/Brackets

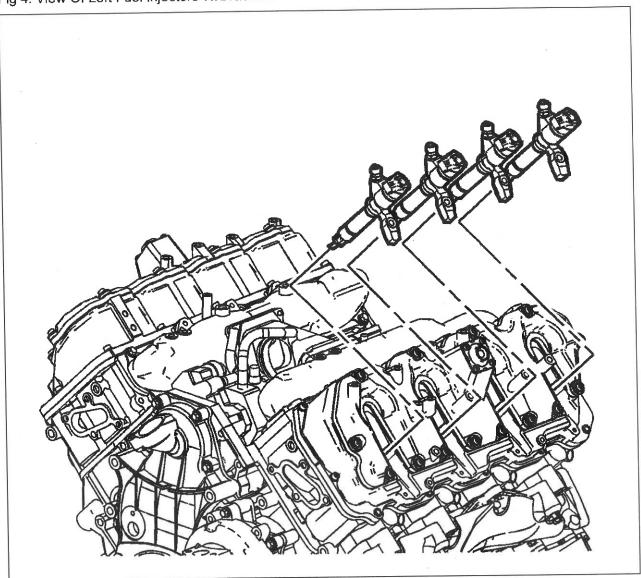

NOTE: Refer to FASTENER NOTICE .

Fig 5: View Of Right Fuel Injector Bracket Bolts

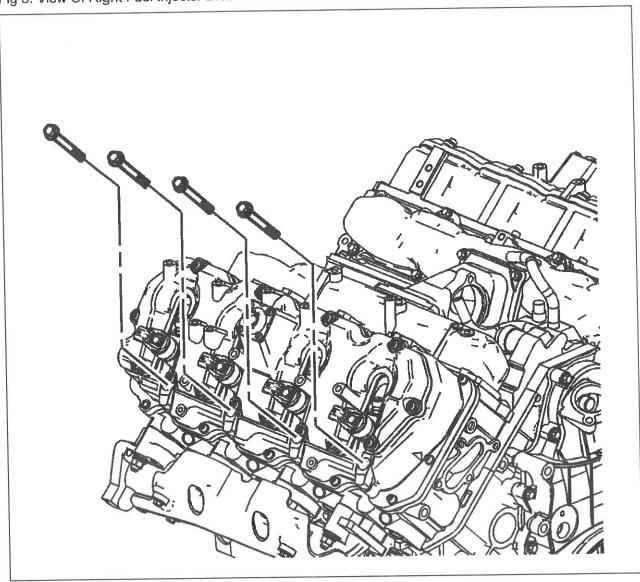

8. Install the right fuel injector bracket bolts.

Tighten: Tighten the right fuel injector bracket bolts to 30 N.m (22 lb ft).

9. Install the left fuel injector bracket bolts.

Tighten: Tighten the left fuel injector bracket bolts to 30 N.m (22 lb ft).

Fig 6: View Of Left Fuel Injector Bracket Bolts

