

# advanced FLOW engineering

Dynamic Air Scoop D.A.S

**Instruction Manual** P/N: 54-76105-S

---

Make: Nissan Model: Titan XD Year: 2016-2019 Engine: V8-5.0L (td) Cummins



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.


## Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-76105B3
B	1	Retainer Clip	03-50525
C	1	Retainer Clip, 8mm	03-01407

Warranty Information available at: <https://afepower.com/contact#warranty>

**Emissions Disclaimer:**

This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

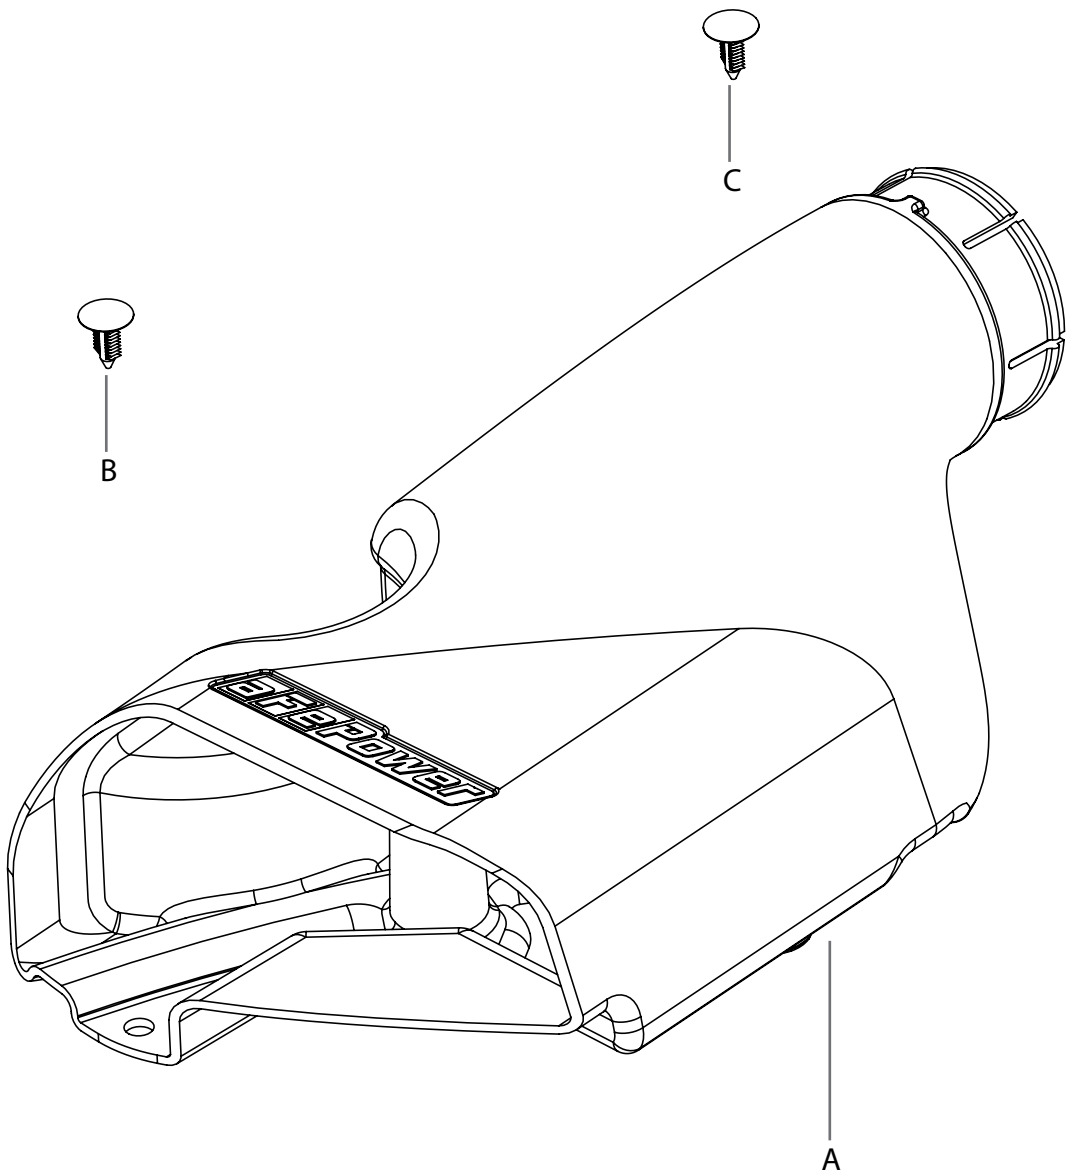

**FigureA**

Refer to Figure A for Steps 1-3

Step 1: Remove the plug on the housing if installed.

Step 2: Push the aFe scoop into the round opening of the housing.

Step 3: Secure the scoop with the push plastic rivet and the Christmas tree plastic rivet, inside the scoop.



FigureB

Refer to Figure B for Step 4

Step 4: Verify the scoop is secured correctly. The installation is now completed.



PAGE LEFT BLANK INTENTIONALLY

PAGE LEFT BLANK INTENTIONALLY



**advanced FLOW engineering, inc.**  
252 Granite Street Corona, CA 92879  
<https://afepower.com/contact>