

**SHOP CATEGORIES** 

WHY S&B









# **INSTALL INSTRUCTIONS FOR 75-5062**



### **BEFORE YOU START**

- Please read the entire product guide before proceeding.
- Ensure all parts are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while the engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.
- Note: This intake kit may not fit with the following Aftermarket
  Parts installed: Body Lift or Lowering Kit, Custom Hood, Throttle
  Body Spacer / Upgrade


### **REQUIRED TOOLS**


- 13mm Wrench/Socket
- 5/16", 15/32", & 1/2" Wrench & Socket
- 3/16" & #5 Metric Hex Key
- 5/16" Nut Driver or Flat Blade Screwdriver
- Drill and 3/4" Drill Bit (Optional)






| ITEM<br>NO. | PART NUMBER | DESCRIPTION   | QTY. |
|-------------|-------------|---|------|
| 1           | AG1018-00   | Hose Clamp, #64                                       | 2    |
| 2           | AI1059-00   | Clip Nut, 1/4"-20                                     | 2    |
| 3           | AI1073-00   | Washer, 1/4", 5/16" ID, 47/64" OD, Zn Plfd            | 2    |
| 4           | Al1080-00   | Washer, Flat, 11/32" ID, 1-1/4" OD, .047 Thk, Zn Pltd | 12   |
| 5           | AI1090-00   | Nut. NyLock, M6 (Battery Hold Down)                   | 1    |
| 6           | AI1131-00   | Screw, Hex Head, 1/4-20 x 1.00, Gr 5, Zinc Pltd       | 2    |
| 7           | Al1163-00   | Bolt, Hex, 5/16"-18 x 1.00"                           | 4    |
| 8           | Al1330-00   | Grommet   | 1    |
| 9           | Al1333C-00  | Coupler, Hump, 4.10 ID x 2.50 Long, Silicone          | 1    |
| 10          | Al1410-00   | 5/16-18 Hex Bolt 1" Long                              | 4    |
| 11          | AI1413-00   | HHCS, M6 x 1.0 x 93mm Long                            | 1    |
| 12          | AI1535-00   | Washer, Flat, M6, 18 mm OD, DIN 9021, Zn Pltd         | 2    |
| 13          | AI1586C-00  | Fender Seal   | 1    |
| 14          | Al1655-01   | Clear Lid   | 1    |
| 15          | AI1657C-00  | Tube Seal   | 1    |
| 16          | Al1683-00   | 18-8 SS Nylock Hex Nut, 5/16"-18 Thread               | 4    |
| 17          | AI1687-00   | Zinc-Plated, Hex Nut, M6x1.0, 10mm Wide, 5mm High     | 1    |
| 18          | AI1814-00   | Grommet   | 1    |
| 19          | Al1816-00   | Battery Block (Battery Hold Down)                     | 1    |
| 20          | AI1991-00   | Washer, Oversized, 0.281" ID (Battery Hold Down)      | 3    |
| 21          | Al2530C-00  | Snap-In Seal  | 1    |
| 22          | AL1198-00   | Intake Tube   | 1    |
| 23          | AL1198B-00  | Air Box   | 1    |
| 24          | AL1198S-00  | Snorkel   | 1    |
| 25          | AL1198T-00  | Battery Tray  | 1    |
| 26          | KF-1059     | Air Filter  | 1    |

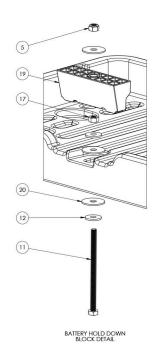

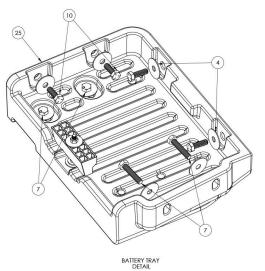

With the ignition switched off and the parking brake set, disconnect the negative battery cables on both batteries, then disconnect the positive battery cable on the driver's side only. Use a 8mm socket.

IMPORTANT: Failure to disconnect the battery for a minimum of 2 hours may cause the Check Engine Light to illuminate upon completion of the installation or subsequent operation. DO NOT SKIP THIS STEP!

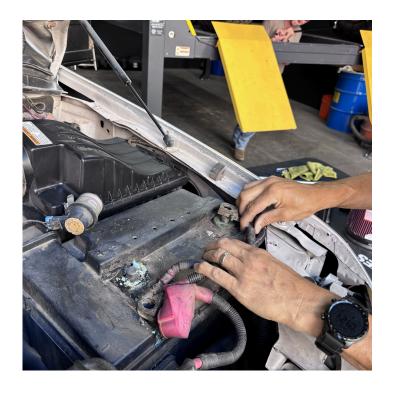


### STEP 2

Remove the stock battery cover by pressing down on the tabs in front of the battery.



With a 8mm socket remove the battery bolt and wedge then remove the battery from the vehicle.

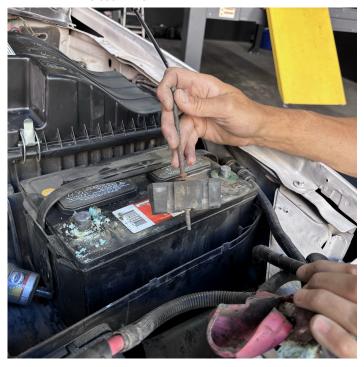


# STEP 4

IF EQUIPPED: Disconnect the stock electronic restriction gauge electrical connector then read Step #16 and plan accordingly.




Loosen the hose clamp at the turbo inlet.

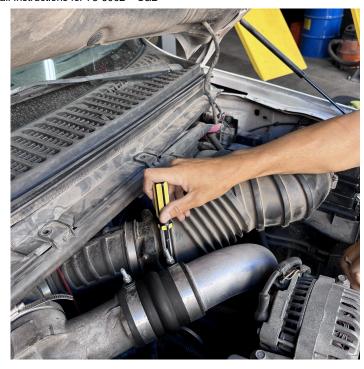

# STEP 6

Unfasten and remove the stock airbox lid and intake tube assembly from the vehicle.

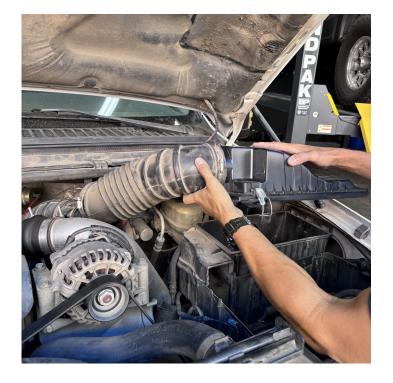

# STEP 7

Remove the four bolts from the stock battery tray from the bottom and side.

NOTE: Early 99' models have a separate Cookie Preferences with an additional bolt. Remove

this bolt as well, then remove the tray from the vehicle.






STEP 7 (IMAGE 2)

From the inside of the stock airbox, turn the air temperature sensor a 1/4 turn to release it from the airbox.


Caution: Be careful not to damage the sensor.

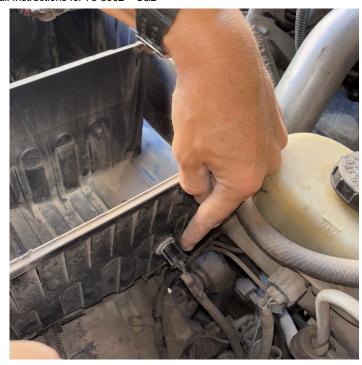

### STEP 9

Remove the airbox and tray from the vehicle.

**NOTE**: Early 99' model stock air boxes have 2 bolts at the inner fender that need to be removed prior to the removal of the airbox.

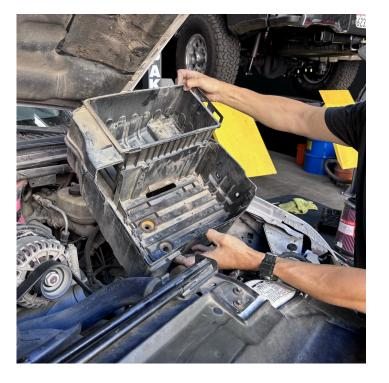

STEP 9 (IMAGE 2)



Install the Clip Nuts onto the Snorkel then slide the snorkel into the Airbox.



# **STEP 11**


Secure the Snorkel with the 1/4"-20 Bolts and Washers. **Do not over tighten.** 




### **STEP 12**

With a 1/2" wrench and socket secure the Battery Tray to the Snorkel and Airbox with the 5/16"-18 Bolts, Washers and Lock Nuts. **Do not over tighten.** 





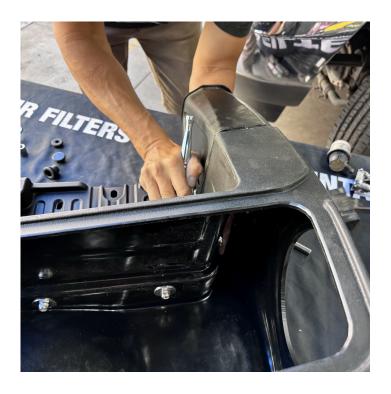

Install the Grommet into the side of the Airbox.



Install the Fender Seal onto the Airbox.



# **STEP 15**

Install the Tube Seal onto the Airbox.




### **READ BEFORE NEXT STEP**

Note: The stock Restriction Gauge is not calibrated for the S&B Intake Kit, both types (Manual and Electronic) will no longer be accurate. However, the electronic type must be reconnected or the indicator light may be triggered.

Important: Service air filter according to S&B precision cleaning instructions. Do not rely on the restriction gauge or wait ..... dash light is triggered.

IF EQUIPPED: To reinstall the electronic restriction gauge drill a 3/4" hole in the Intake Tube at the drill point and insert the Grommet.

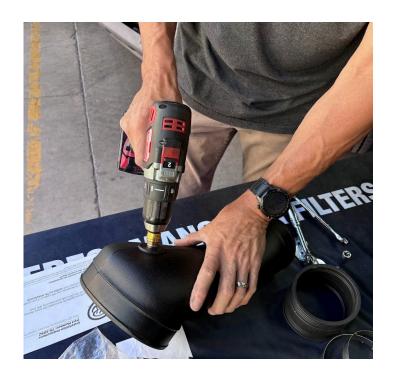

# STEP 16 (IMAGE 2)



# **STEP 17**

Install the Intake Tube through the Tube Seal from inside the Airbox. Pull out the intake tube until it reaches the stop bead.




Install both #64 Hose Clamps onto the Coupler and slide onto the intake tube. Do not tighten yet.



### **STEP 19**

Install the battery hardware to the Battery Tray. M6 Bolt, Split Washer, Washers and Jam Nut . Tighten the Jam Nut and M6 Bolt. Lock, do not install the battery block yet.

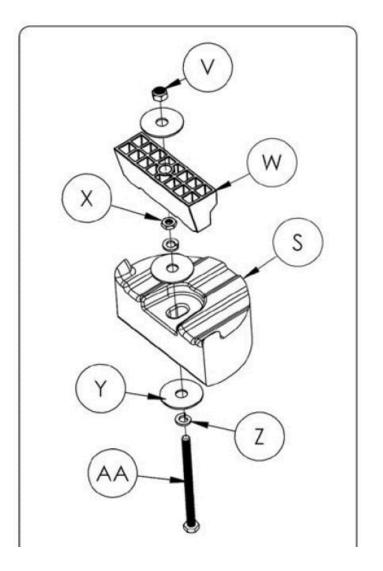

# STEP 19 (IMAGE 2)



# **STEP 20**

Install the complete airbox assembly into the vehicle.



Align the mounting holes for the Battery Tray going to the fender and underneath the airbox. Install the provided M8 Bolts and Washers through the battery tray which should thread into the factory clip nuts.




### **STEP 23**

Install the provided M8 Bolts and Washers to secure the Battery Tray to the fender.



Align the Intake Tube with the turbo inlet then slide the Coupler onto the turbo inlet.

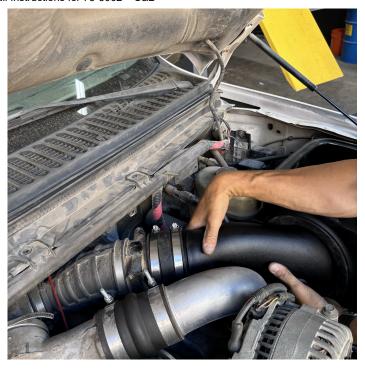

# **STEP 25**

Tighten the #64 Hose Clamp.



### **STEP 26**

Install the Air Filter onto the Intake Tube and tighten the hose clamp. Make sure the filter flange is properly aligned with the stop bead before tightening completely. The filter and tube may

Cookie Preferences be adjusted to fit straight with the box.



install the battery onto the battery tray.



# **STEP 28**

Install the Battery Block over the M6 Bolt, then secure the block with a Washer and Lock Nut.



Remove the protective covering from the Clear Lid.



# **STEP 30**

Install the Edge Trim around the edge of the Clear Lid.



# **STEP 31**

Starting on 1 side of the airbox opening. Snap in the the lid to the airbox.



Install the air temperature sensor into Airbox by pushing firmly into the grommet.




### **STEP 33**

IF EQUIPPED: Reconnect the electronic restriction gauge and push it into the grommet on the intake tube. Press firmly to ensure a airtight seal.



Reconnect the negative terminal on the battery. Inspect your installation, make sure the kit is properly positioned and all fasteners are secure. Keep all stock parts in case you ever need to reinstall the stock intake assembly. Affix the ID label near the intake kit. The installation is now complete.

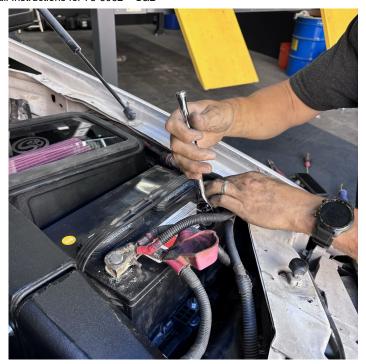

# POWER STEERING RESERVOIR ACCESS

### STEP 1

Turn the cap left to open the power steering reservoir. Lift up the cap until you can see the slanted portion for level indicator then slide the cap to the edge of the reservoir, slightly tip the cap and pull it out. It will take some force to get the cap out.





# STEP 1 (IMAGE 2)

### STEP 2

Use a paper or plastic funnel to refill your power steering fluid if needed. Reinstall the power steering reservoir cap.



### **SUPPORT**

CONTACT US CALL US - (909) 947-0015

FAQS MILLION MILE WARRANTY

YOUR VEHICLE'S WARRANTY UPGRADE GUARANTEE

SHIPPING & RETURNS SAFETY DATA SHEETS

### **ABOUT US**

WHY S&B FIND A DEALER

BLOG UNILATERAL PRICING POLICY

LET S&B USE YOUR VEHICLE BECOME A DEALER

ISO 5011 TESTING

DEALER LOGIN

